

# Pinout Instruction


## Analog Depth to CAN

**CAUTION:** Disconnect the battery during installation. Tighten nuts on the back clamp only slightly more than you can tighten with your fingers. Six inch-pounds of torque are sufficient. Over tightening may result in damage to the instrument and may void your warranty.

*P1 12 PIN DEUTSCH, A KEY*

*PIN# FUNCTION*

- 1 – Depth Transducer Signal*
- 2 – Depth Transducer Ground*
- 3 – NMEA0183 A (future use)*
- 4 – Ground*
- 5 – Ignition*
- 6 – Water Temp*
- 7 – Paddlewheel Sensor*
- 8 – NMEA0183 B (future use)*
- 9 – NMEA2k Power*
- 10 – CAN Shield/GND*
- 11 – CAN HIGH*
- 12 – CAN LOW*

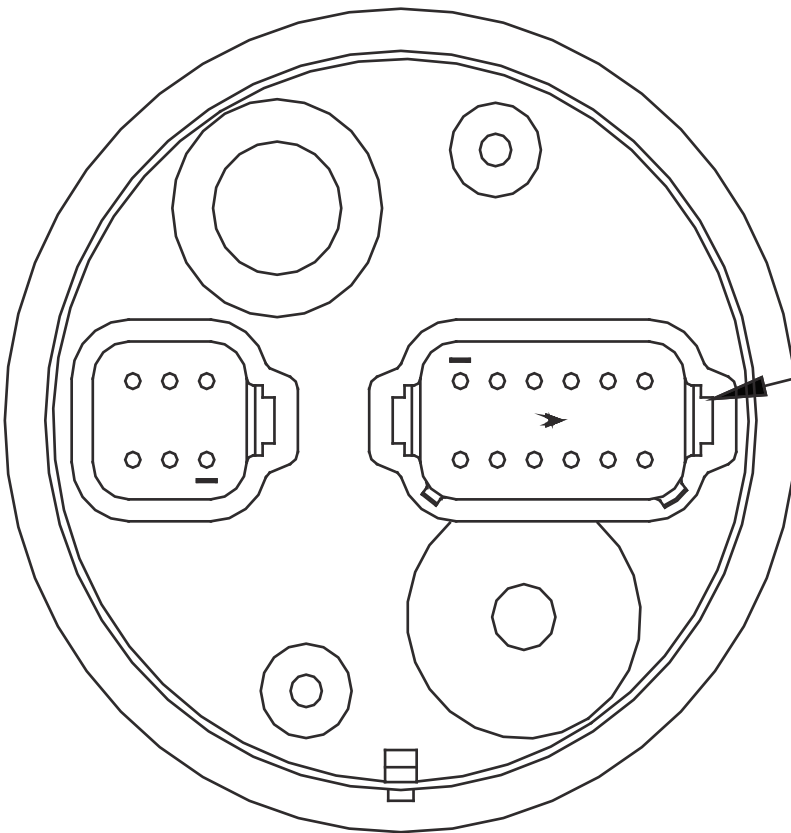

-- 2

For technical assistance, contact Faria® Marine Instruments Customer Service between 8:30 AM and 5:30 PM Eastern time weekdays at (860) 848-9271 or (800) 473-2742.