

# Harness HN0358

## Small Connector



### SystemCheck® adaptor

Small connector (CN0082)


Pin A	Purple	+14 Ignition
Pin B	Tan/Orange	Check Engine
Pin C	Black	Ground
Pin D	Gray	Tachometer Signal

ECR 2275 4/15/02

To Small Connector Socket

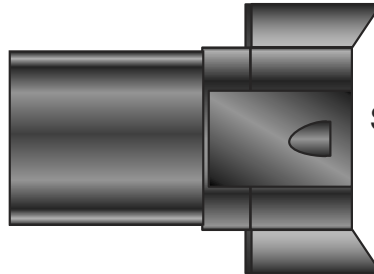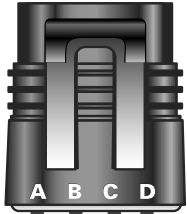

SystemCheck®  
Harness

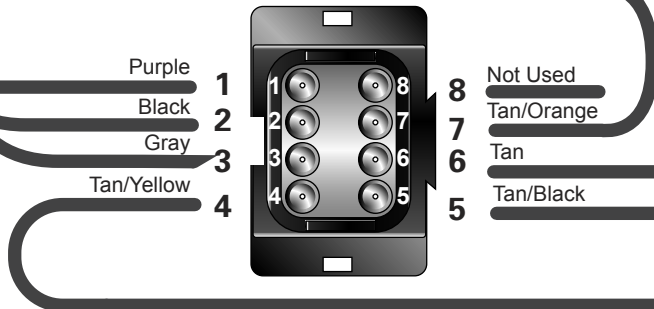

SystemCheck® Harness Deutsch Connector

Pin 1	Purple	+14 vDC Ignition
Pin 2	Black	Ground
Pin 3	Gray	Tachometer Signal
Pin 4	Tan/Yellow	No Oil Sensor
Pin 5	Tan/Black	Low Oil Sensor
Pin 6	Tan	Over Temperature
Pin 7	Tan/Orange	Lo Oil Sensor
Pin 8		Not Used

ECR 2275 4/15/02

# Harness HN0358

## Large connector

### SystemCheck®

Large connector (CN0083)

Pin A	Red	Fuel Transducer Power
Pin B	Tan	Over Temperature
Pin C	White	Fuel Transducer Signal
Pin D	Pink	Fuel Tank Level
Pin E	Tan/Black	Low Oil Sensor
Pin F	Tan/Yellow	No Oil Sensor

ECR 2275 4/15/02

To Large Connector Socket



Tan (Over Temperature)  
Tan/Black (Lo Oil Sensor)  
Tan/Yellow (No Oil Sensor)



Fuel Flow Transducer

Black Red  
(Fuel Flow Transducer Power)  
White White  
(Fuel Flow Transducer Signal)  
Shield Boat Ground  
(Fuel Flow Transducer Ground)

Pink  
(Fuel Tank Level)